




**CleanAir Solutions, Inc.**  
The Cleanroom Specialists

## Softwall Cleanrooms

Our ***Flexible Solutions*** Softwall Cleanrooms Control a Variety of Workspace Environments

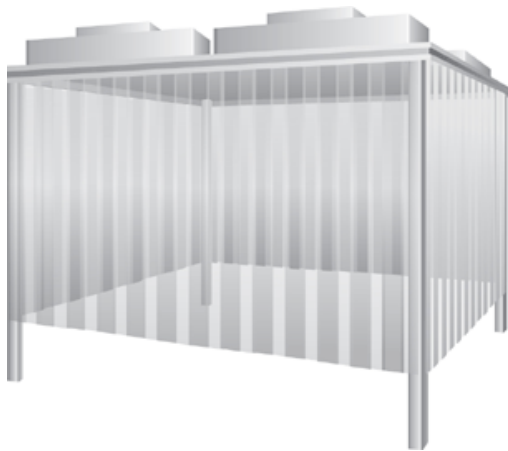

We offer both standard designs and custom-engineered softwall cleanrooms for demanding and unique applications. Self-contained

*Flexible Solutions* Softwall Cleanrooms are offered in ISO Class 5 through 9, or US Federal Standard 209 Class 100 through 100,000. Standard rooms are equipped with SAM® Fan Filter Units for HEPA filtration, lighting, a 4' strip door, and solid curtain wall panels.

We offer several options including castors, telescoping legs, a variety of curtain choices, and our exclusive state-of-the-art *Airlink* Control System. With our optional castors, you can easily roll the *Flexible Solutions* Softwall Cleanroom from one location to another for maximum flexibility.



**CleanAir Solutions, Inc.**  
The Cleanroom Specialists

## MODULAR CLEANROOM SYSTEMS

**Designers and Builders  
Of Laminar Flow Systems  
And Equipment for Cleanrooms**

- ▲ Softwall Cleanrooms
- ▲ Modular Hardwall Cleanrooms
- ▲ Laminar Flow Modules
- ▲ Air Showers
- ▲ Fan Cabinets
- ▲ Light Fixtures
- ▲ Fan Filter Modules



**CleanAir Solutions, Inc. specializes  
in providing flexible solutions.**



CleanAir Solutions, Inc. offers standard clean room designs, both freestanding and permanent, for isolating any workstation while maximizing available space.

**CleanAir Solutions, Inc.**


Call for a  
no-obligation  
quote on your next  
cleanroom project

*Puzzled by your latest  
drop in yield? Let us help...*

(707) 864-9499



**CleanAir Solutions, Inc.**  
The Cleanroom SpecialistS

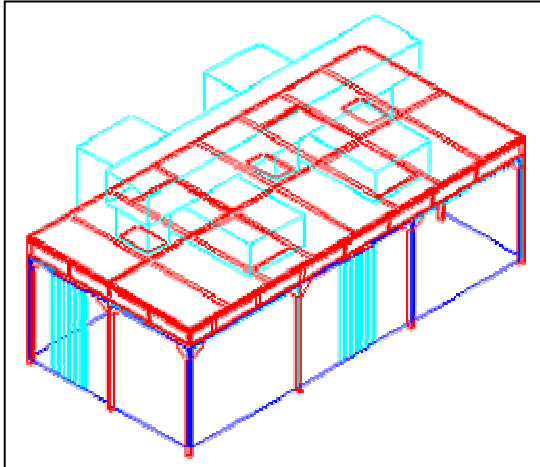


**Custom designed to fit your needs!**

- ▲ Fan-Powered or Terminal End HEPA filter modules
- ▲ Maximizes space utilization
- ▲ Softwalls are available in any size and configuration
- ▲ The cleanliness class level of the room can be changed by simply adding or removing filters.
- ▲ Optional lighting can be added or removed to vary lighting levels.

**Softwall Cleanroom Options**

- ▲ Optional lighting can be added or removed to vary lighting levels.
- ▲ To enhance the portability of the unit you can add our optional caster package.
- ▲ UV lighting for shielding or germicidal applications are available.
- ▲ Flows thru lights are used when 100% filter coverage is required.
- ▲ For your convenience, we also offer our pre-wired electrical package to bring the entire component wiring to a single point of connection.
- ▲ Wall outlets and switches can be added.
- ▲ Curtains can be standard vinyl or ESD safe depending on your application needs.

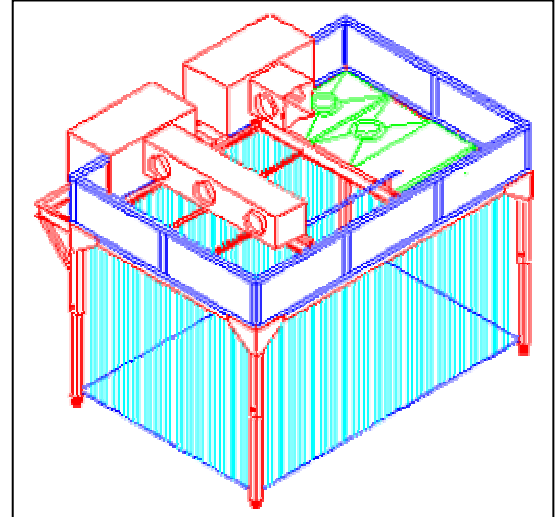



**CleanAir Solutions, Inc.**  
The Cleanroom Specialists

## CLEAN ROOM CURTAINS

**A variety of curtain styles are Available.**

- ▲ ESD & UV Safe Curtains
- ▲ Softwall Panels
- ▲ Strip Shields
- ▲ Strip Curtains
- ▲ Sliding Track Curtains
- ▲ Accordion Style Curtains
- ▲ Bulk Roll Material
- ▲ Rigid Plastics
- ▲ Custom Vinyl Covers
- ▲ O-ring Bags (waste removal)



The SEAL-TECH System is far and away the best attachment method available anywhere. This innovative design makes installation and panel replacement simple.

**Not all anti-static curtains are created equal.**

Standard  
Conductive  
UV Safe

ESD Safe  
Non-Outgassing  
Frosted



**CleanAir Solutions, Inc.**

Call for a no-obligation quote on your next cleanroom project

*Puzzled by your latest drop in yield? Let us help...*

(707) 864-9499