


32-1130 REV 1

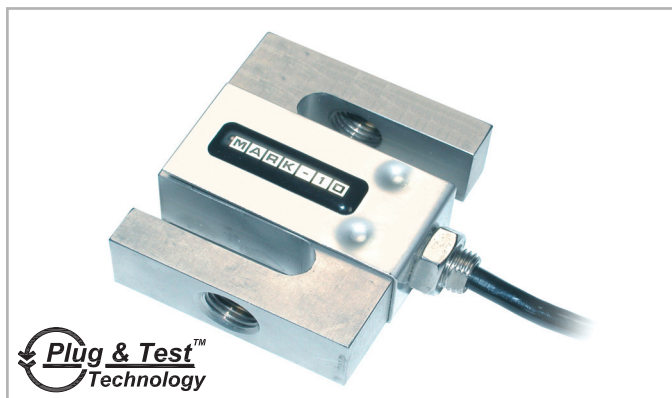


Series R01 rugged smart sensors are designed for measuring tension and compression force, with applications in virtually every industry. Durable S-Beam design with threaded holes on two sides allows for many configurations. Steel construction ensures many years of use. The sensor can be integrated into an existing system or mounted to a Mark-10 test stand. Capacities available from 50 to 10,000 lbf [250 N to 50 kN]. Compatible with Mark-10 indicators (sold separately) through unique Plug & Test™ technology.

Specifications

Accuracy:	±0.15% of full scale + indicator
Safe Overload:	150% of full scale
Weight:	1.9 to 3.0 lb [0.9 to 1.4 kg], depending on model

Dimensions in [mm]

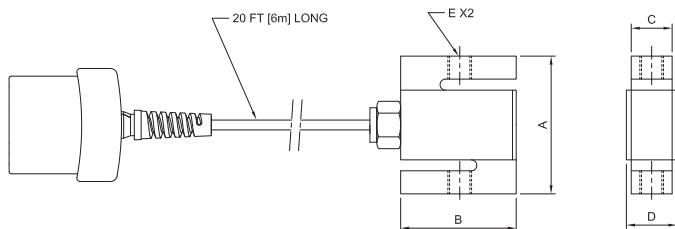

Optional Items

AC1018	Mounting kit, Series R01/R03 to test stand
---------------	--

Capacity x Resolution

Model No.	With Models 7i & 5i indicators						With Model 3i indicator			
	lbf	ozF	gF	kgF	N	kN	lbf	kgF	N	kN
MR01-50	50 x 0.02	800 x 0.5	25000 x 10	25 x 0.01	250 x 0.1	-	50 x 0.05	25 x 0.02	250 x 0.2	-
MR01-100	100 x 0.05	1600 x 1	50000 x 20	50 x 0.02	500 x 0.2	-	100 x 0.1	50 x 0.05	500 x 0.5	-
MR01-200	200 x 0.1	3200 x 2	-	100 x 0.05	1000 x 0.5	1 x 0.0005	200 x 0.2	100 x 0.1	1000 x 1	-
MR01-500	500 x 0.2	8000 x 5	-	250 x 0.1	2500 x 1	2.5 x 0.001	500 x 0.5	250 x 0.2	2500 x 2	-
MR01-1000	1000 x 0.5	16000 x 10	-	500 x 0.2	5000 x 2	5 x 0.002	1000 x 1	500 x 0.5	5000 x 5	-
MR01-2000	2000 x 1	32000 x 20	-	1000 x 0.5	10000 x 5	10 x 0.005	2000 x 2	1000 x 1	10000 x 10	-
MR01-5000	5000 x 2	-	-	2500 x 1	25000 x 10	25 x 0.01	5000 x 5	2500 x 2	-	25 x 0.02
MR01-10000	10000 x 5	-	-	5000 x 2	50000 x 25	50 x 0.02	10000 x 10	5000 x 5	-	50 x 0.05



< Unique Plug & Test™ technology allows for interchangeable sensors to be used with any Mark-10 indicator. All calibration and configuration data is saved in the smart connector.



< The Plug & Test™ connector locks into the receptacle in the indicator when fully inserted. Dual buttons on the indicator housing release the connector for easy removal. Gold plated spring contacts ensure long lasting and reliable connection.



< Optional AC1018 mounting kit adapts a Series R01 sensor to a Mark-10 test stand.

Model No.	A	B	C	D	E
MR01-50			0.46	0.65	1/4-28
MR01-100			[11.7]	[16.5]	UNF
MR01-200	2.40	2.00			
MR01-500	[61.0]	[50.8]	0.71	0.90	1/2-20
MR01-1000			[18.0]	[22.9]	UNF
MR01-2000					
MR01-5000	3.90	3.00	0.96	1.15	3/4-16
MR01-10000	[99.1]	[76.2]	[24.4]	[29.2]	UNF