

# I-MATCH 2

## Rechargeable headlamp for DETAILING and COLOUR MATCH

The new I-MATCH 2 features a 2 COLOUR LIGHT function. This provides you with the option to choose between 2 different colour temperatures depending on the type of job to be carried out. Typically, the WARM LIGHT (4500K) is useful for bright surfaces, and COLD LIGHT (6500K) is ideal for dark coloured surfaces.

Supplied with the newest COB LED technology, the new, rechargeable I-MATCH 2 provides an extremely powerful illumination spreading the uniform light to the maximum and lightens up your entire field of view.

By waving your hand in front of the lamp, you will switch on the light when needed. In sensor mode, the light can easily be switched on/off, even when wearing gloves.


I-MATCH 2 is provided with the very newest rechargeable battery technology with long operating time, and sets new standards for professional work light.

Supplied with 2 lumen output options, 50% or 100%. The robust and sleek I-MATCH 2 is both dust and waterproof (IP65) with a remarkably low weight, only 140g.



EU DESIGN  
PATENT  
2635946

### ILLUMINATED AREA

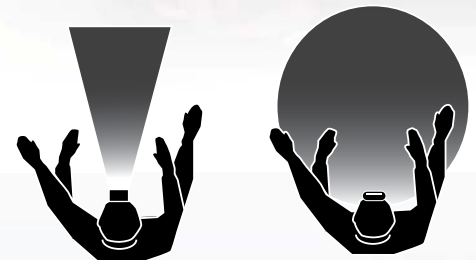

Standard headlamp

I-MATCH 2 headlamp


### TECHNICAL SPECIFICATIONS

- Ultra high CRI+ COB LED
- 96 CRI+
- 4500/6500 KELVIN
- 250/500 lux (step 1/step 2)
- 80/160 lumen (step 1/step 2)
- 5h/2.5h operating time
- 3.8V/1600mAh li-poly
- 3h charging time
- IK07
- IP65

### I-MATCH 2

Item no. 03.5446

EAN: 5708997354469

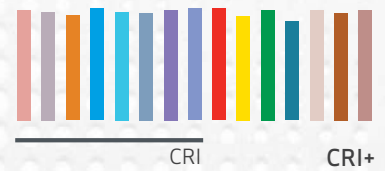

### 2 COLOUR LIGHT

